


# Error flow chart Hub Unit "Grease Leakage"


## Troubleshooting for Problems on All or Individual Wheels of the Trailer / Semi-trailer

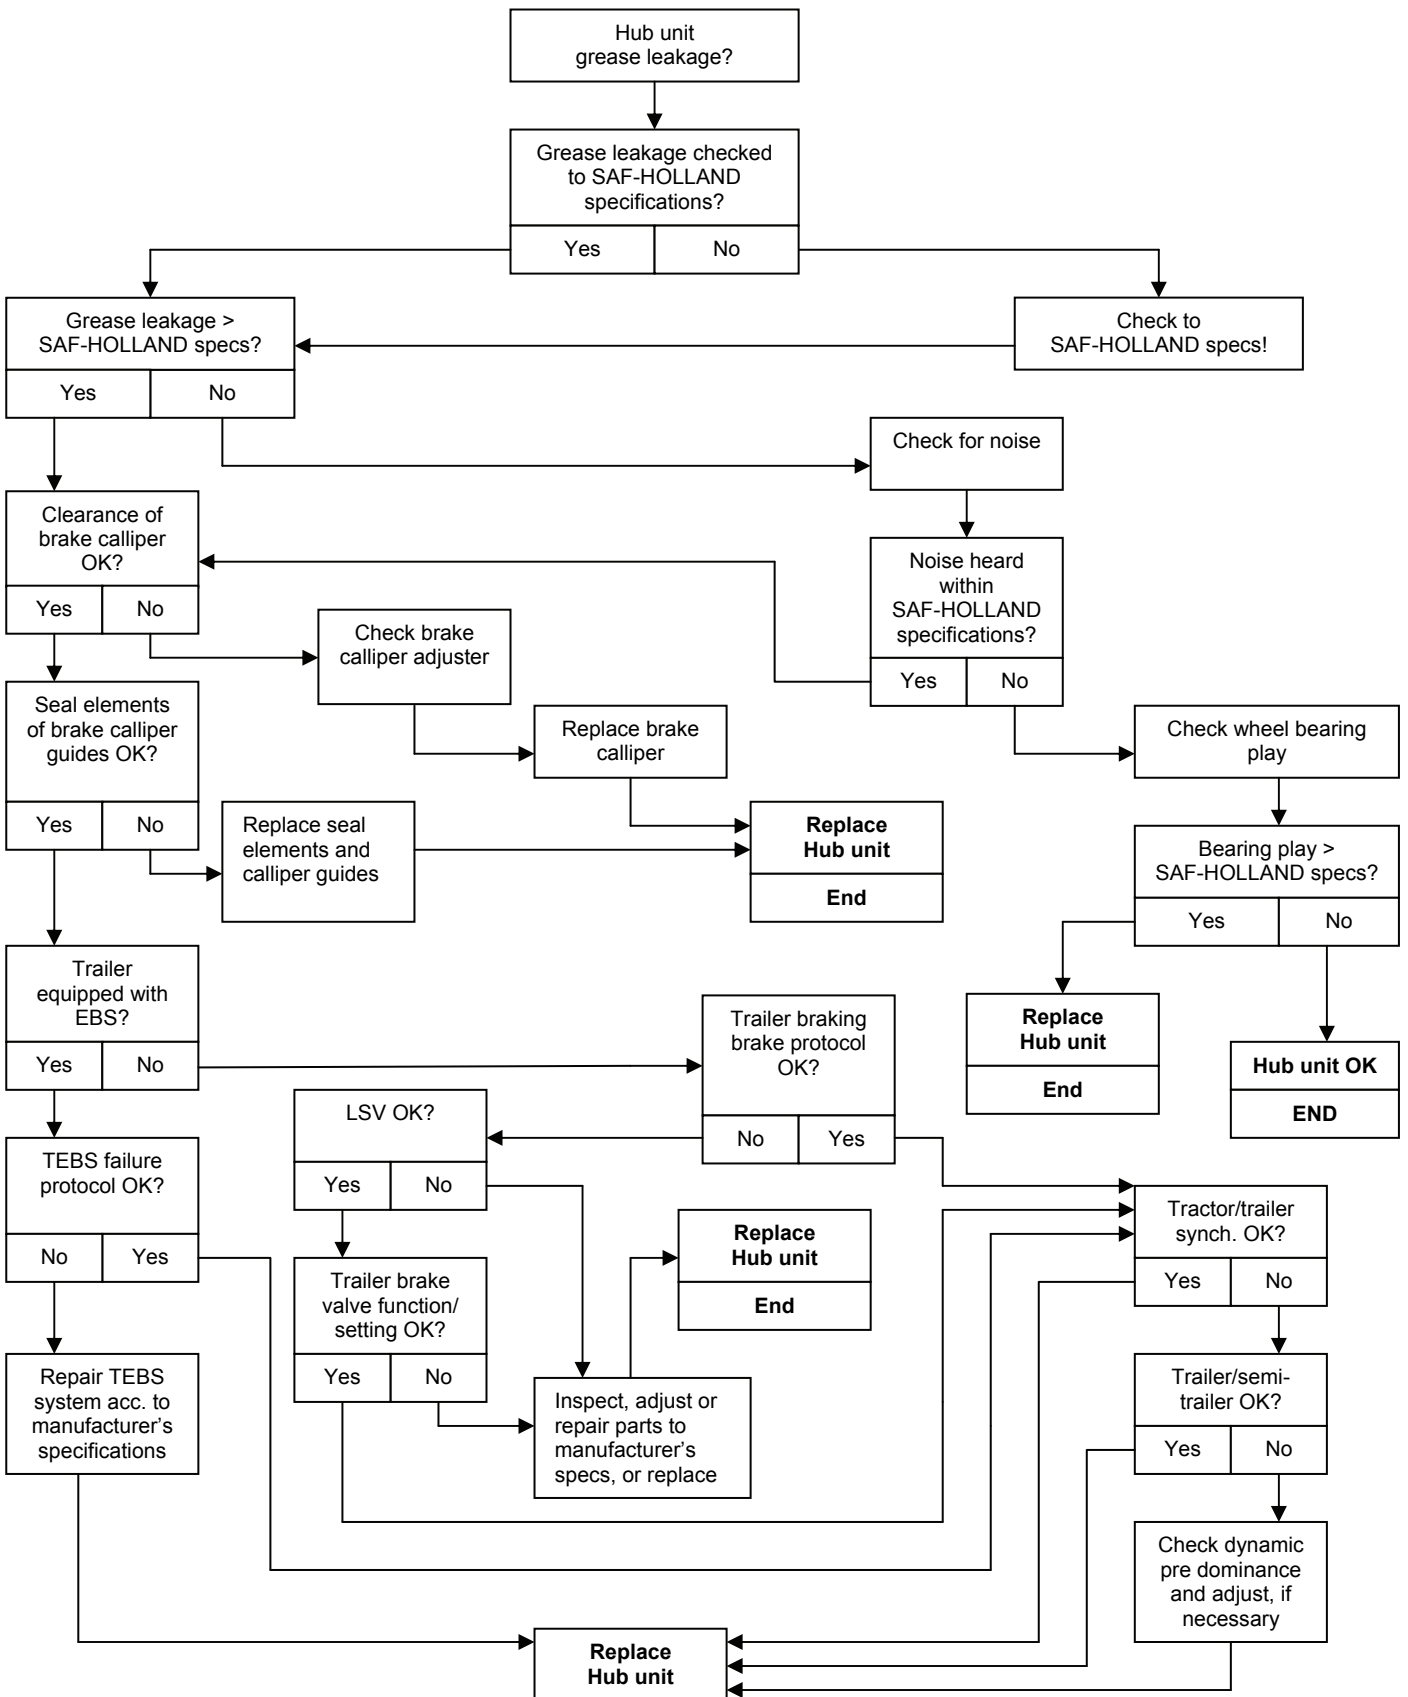

This sheet is intended merely as an aid to troubleshooting. Depending on the brake system version, differences are possible. SAF-HOLLAND can therefore assume no liability for correctness. Repairs to the brake system may only be carried out by authorised personnel.

# Error flow chart Hub Unit "Noise"

## Troubleshooting for Problems on All or Individual Wheels of the Trailer/ Semi-trailer

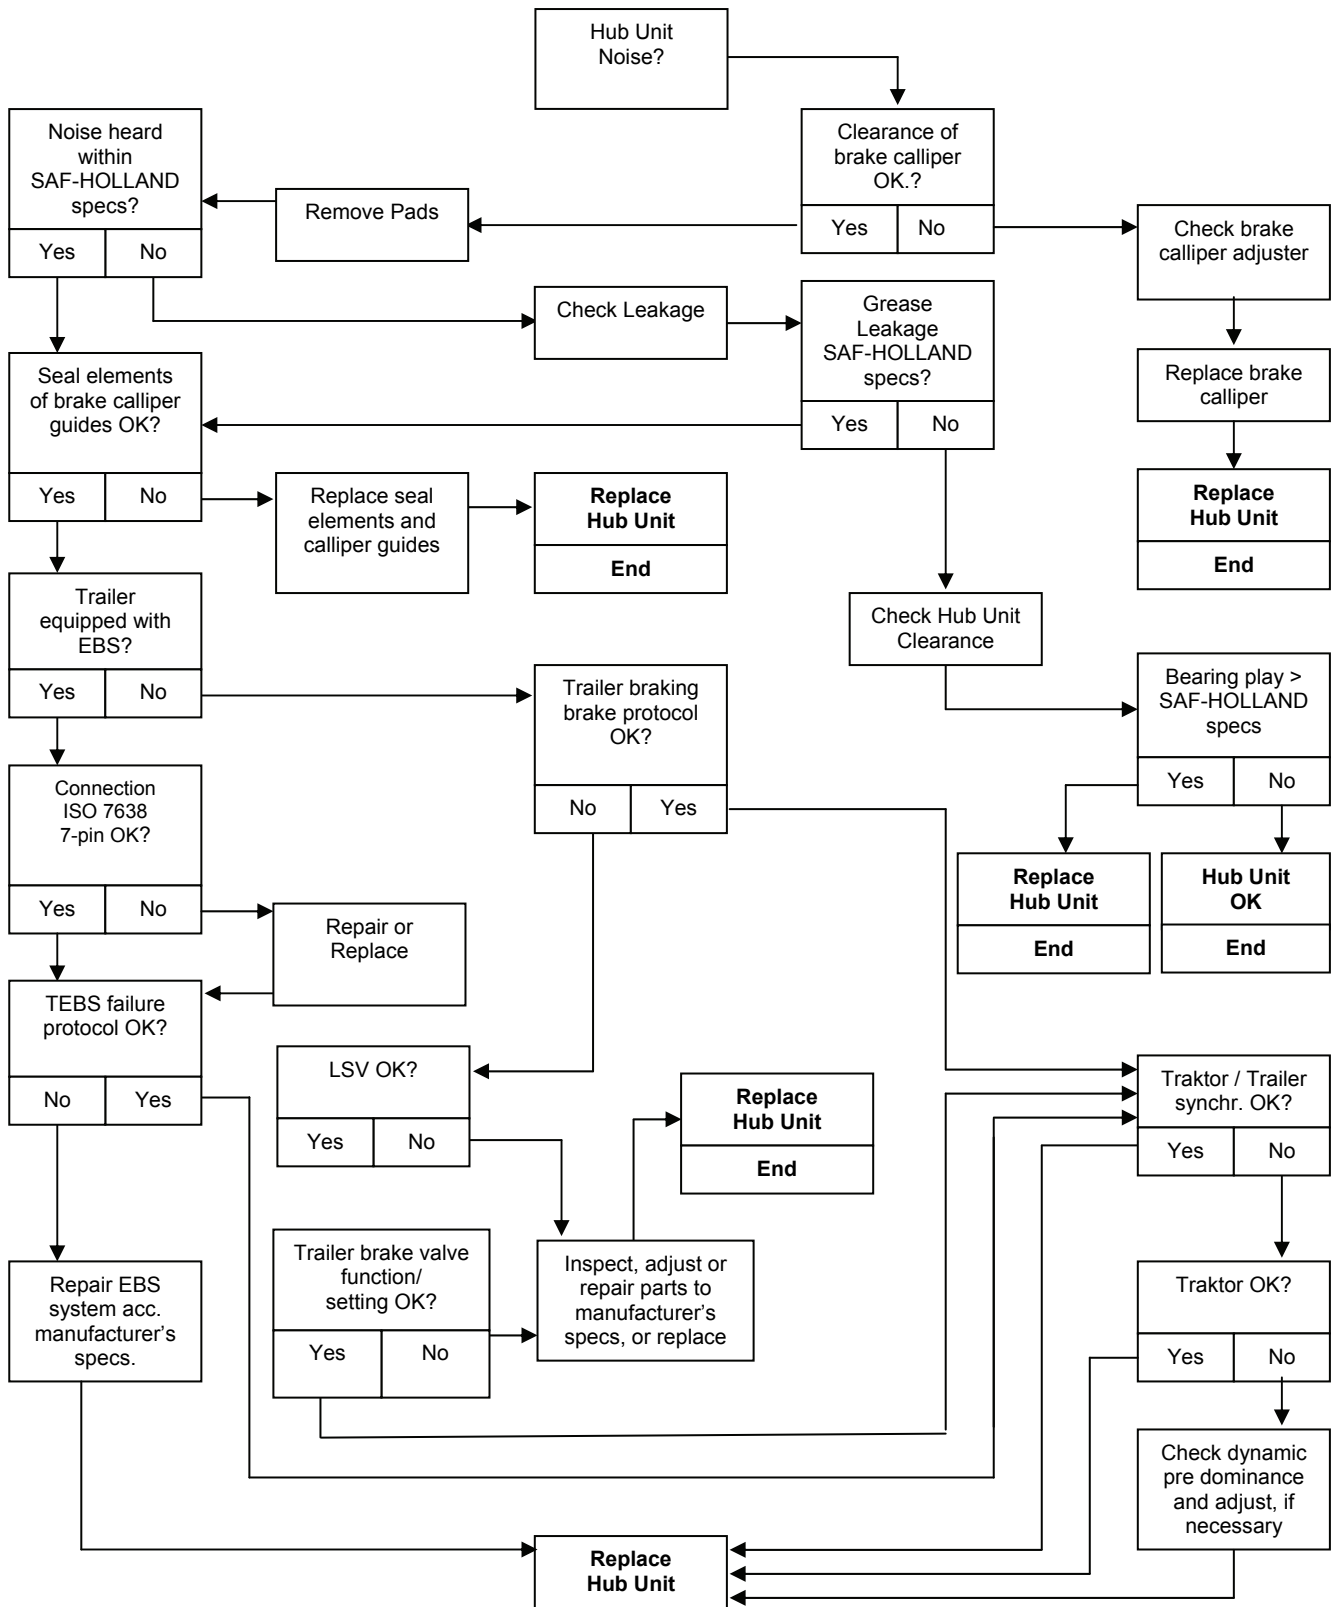


This sheet is intended merely as an aid to troubleshooting. Depending on the brake system version, differences are possible. SAF-HOLLAND can therefore assume no liability for correctness. Repairs to the brake system may only be carried out by authorised personnel.

# Error flow chart Hub Unit "Bearing clearance"



## Troubleshooting for Problems on All or Individual Wheels of the Trailer / Semi-trailer

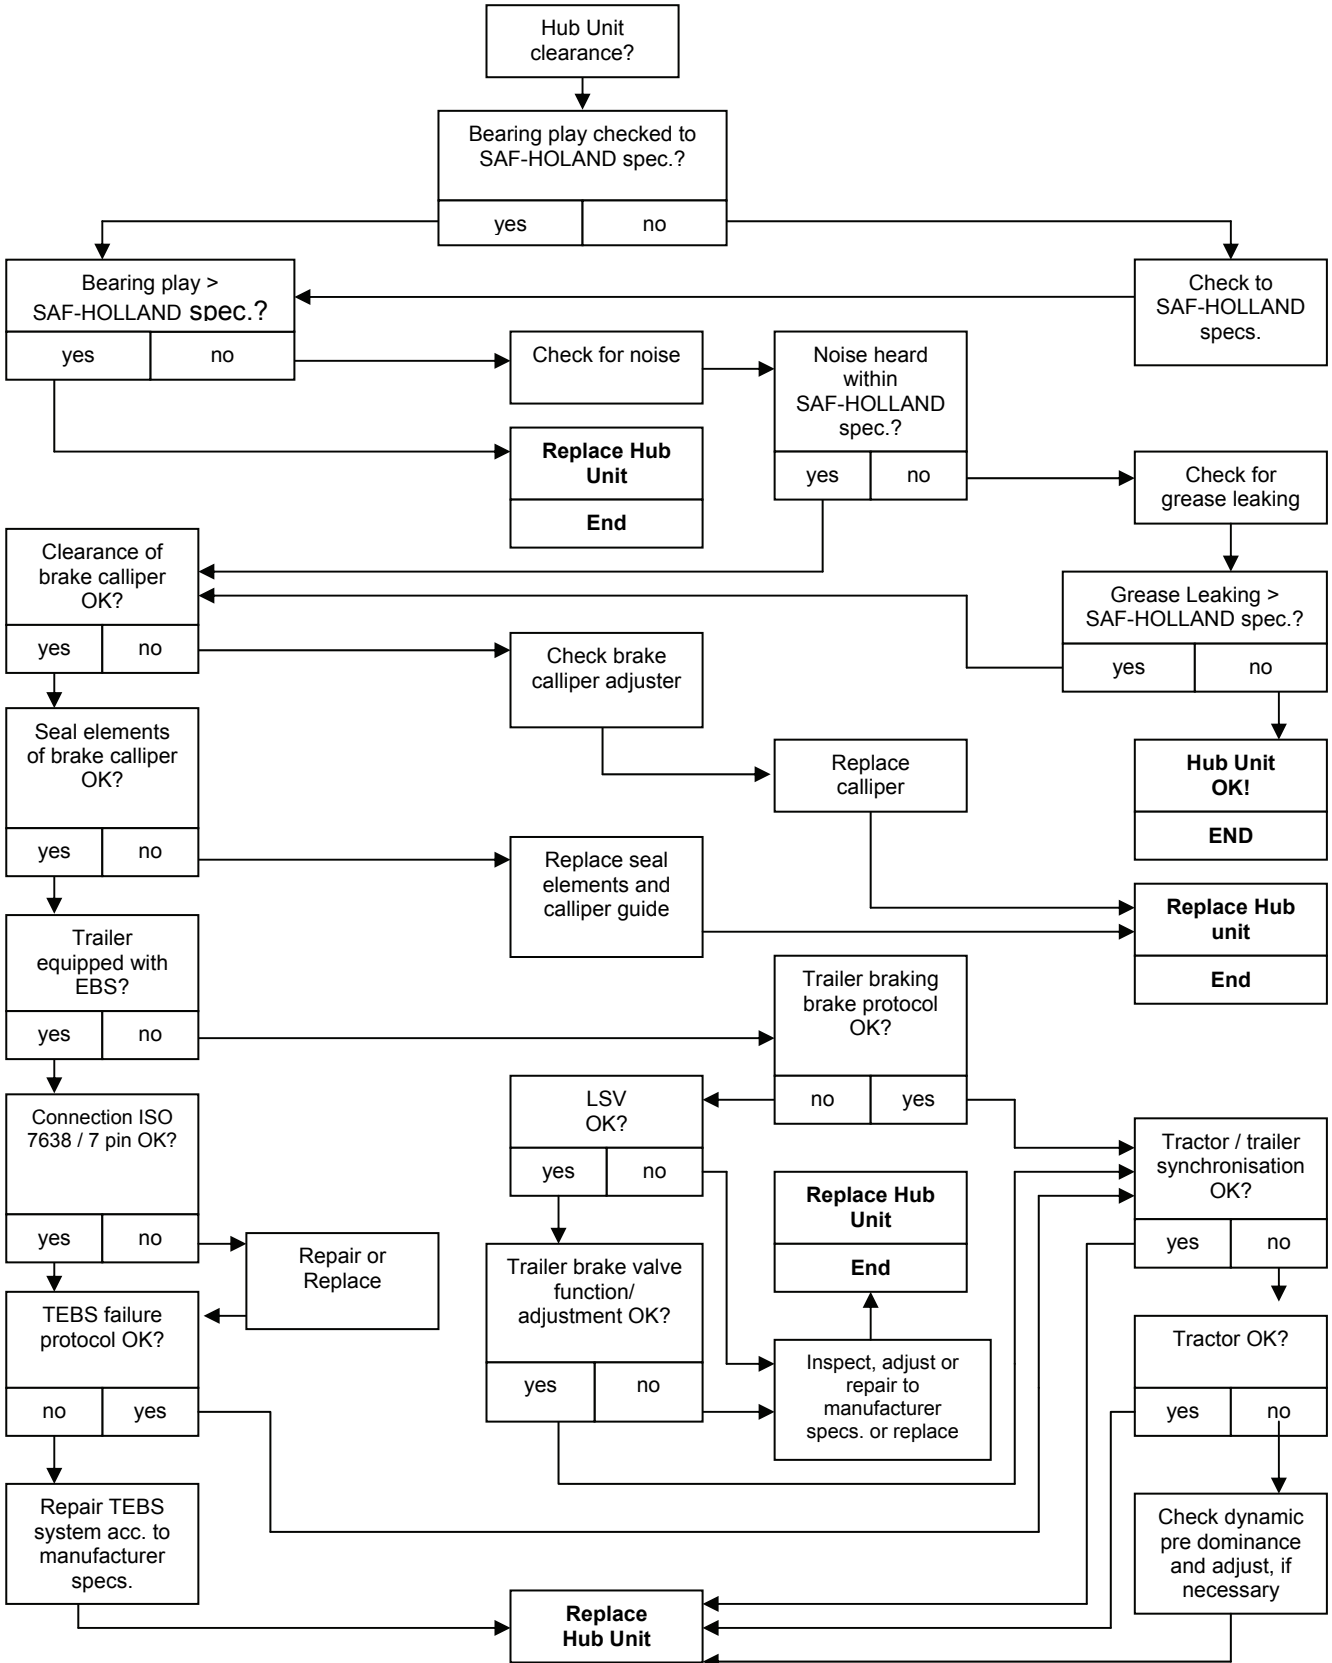

This sheet is intended merely as an aid to troubleshooting. Depending on the brake system version, differences are possible. SAF-HOLLAND can therefore assume no liability for correctness. Repairs to the brake system may only be carried out by authorised personnel.