

Instructions for use




Edition 09/2014







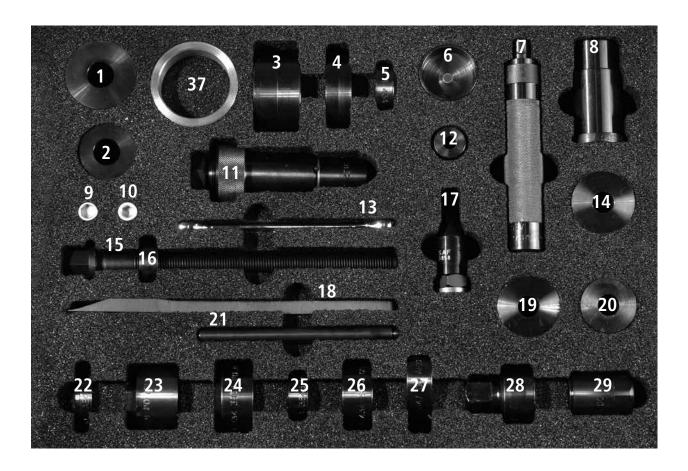

SAF Spare parts list

No.	SAF Part. No.	Designation	
1	4 434 3846 00	Puller for floating bearing, type SN	
2	4 434 3838 00	Puller sleeve	
3	4 434 3833 00	Driver cup	
4	4 434 3835 00	Driver cup – adapter	
5	4 434 3850 00	Insert with magnet	
6	4 434 3849 00	Driver with magnet	
7	4 434 3856 00	Handle	
8	4 434 3851 00	Driver sleeve	
9	4 434 3826 00	W.A.F. 8	
10	4 434 3827 00	W.A.F 10	
11	4 434 3832 00	Caulking and pulling tool	
12	4 434 3843 00	Driver for sheet metal sleeve	
13	4 434 3825 00	Ring / open-jaw spanner	
14	4 434 3853 00	Driver sleeve	
15	4 434 3837 00	Threaded spindle TR20x2	
16	4 434 3848 00	Thrust bearing	
17	4 434 3858 00	Spindle – short/long	
18	4 434 3844 00	Lever fork	
19	4 434 3852 00	Driver sleeve	
20	4 434 3854 00	Driver sleeve	
21	4 434 3834 00	Retaining bar	
22	4 434 3840 00	Puller plate	
23	4 434 3839 00	Puller sleeve for bellows	
24	4 434 3855 00	Driver	
25	4 434 3845 00	Puller sleeve	
26	4 434 3842 00	Adapter ring	
27	4 434 3847 00	Puller plate	
28	4 434 3836 00	Thruster with hexagon head	
29	4 434 3841 00	Nut TR20x2	
30	4 434 3890 00	Clamp SBS2220H	
31	4 434 3889 00	Mandrel SBS2220H	
32	4 434 3884 00	Cup SBS2220H	
33	4 434 3888 00	Calliper bellows press, right SBS2220H	
34	4 434 3887 00	Calliper bellows press, left SBS2220H	
35	4 434 3885 00	Pulling bracket SBS2220H	
36	4 434 3886 00	Thrust plate bellows press SBS2220H	
37	4 434 3893 00	Ring (SL7 / SM7)	

Repair of the fixed bearing (rubber bush)	
liper type SB7(SK) and SB7 (SN) (SAF Part No. XX.XXX.XXXX.21) Repair of the floating bearing	10
Repair of the fixed bearing	
the thrusters with bellows	
liper type SB6 and SB7 Replace the thruster bellows incl. inner seal	13
liper type SL7 and SM7 Replace the thruster bellows	13
liper type SB6(SN), SB7(SN), SK7 Replace the thruster bellows incl. inner seal	14
iper	
liper type SBS2220H	
Mounting of thrust plate bellow	15
the calliper guide	
Repair of the floating bearing (plastic bearing)	
Exchange of reset shaft	17
calliper	
the calliper guide	
Brake calliper WABCO (PAN 19-1, PAN 19-1 plus and PAN 22-1)	18

SV11463GB Edition 09/2014 \cdot Last updated 2014-09-03 \cdot Amendments and errors reserved \otimes SAF-HOLLAND

e parts listortant note	
ortant note	
RR brake calliper	
Replace the calliper guide	
Brake calliper type SB6 and SB7	
Repair of the floating bearing	
Repair of the fixed bearing	
Brake calliper type SB6(SN) and SB7(SN)	
Repair of the floating bearing (rubber bush)	
Repair of the fixed bearing	
Brake calliper type SB7(SK) and SB7 (SN) (SAF Part No. XX.XXX.XXXX.21)	
Repair of the floating bearing	
Repair of the fixed bearing	······································
Replace the thrusters with bellows	
Brake calliper type SB6 and SB7	
Replace the thruster bellows incl. inner seal	
Brake calliper type SL7 and SM7	
Replace the thruster bellows	
Brake calliper type SB6(SN), SB7(SN), SK7	
Replace the thruster bellows incl. inner seal	
brake calliper	
Brake calliper type SBS2220H	
Mounting of thrust plate bellow	
Replace the calliper guide	
Repair of the floating bearing (plastic bearing)	
Repair of the fixed bearing	
Exchange of reset shaft	
BCO brake calliper	
Co diane camper	

SAF

Important note

These "Instructions for Use" are intended purely to assist the customer in maintenance and repair work (service) on SAF axles with disc brakes using the enclosed tools. They have been written and are suitable exclusively for employees with the necessary technical competence in the commercial vehicle industry and the commercial vehicle trade. They must not be passed on to third parties. In addition, the following conditions shall apply:

- 1. The enclosed tools are exclusively suitable for use in the course of repair and maintenance work (service) on the brakes from the manufacturers KNORR, SAF-HOLLAND and WABCO listed below:
 - KNORR SB6
 - KNORR SB6...(SN)
 - KNORR SB7
 - KNORR SB7...(SN)
 - KNORR SB7...(SK)
 - KNORR SL7 / SM7
 - SAF SBS2220H
 - WABCO PAN 19-1
 - WABCO PAN 19-1 plus
 - WABCO PAN 22-1

SAF-HOLLAND assumes no responsibility or liability for these "Instructions for use" in conjunction with maintenance and repair work (service) on other brakes or on brakes from other manufacturers or it tools other than those enclosed are used.

- 2. The contents and information in these "Instructions for use" do not represent guarantees in the sense of the German Civil Code (BGB), nor can they be construed as such.
- 3. SAF-HOLLAND assumes unlimited liability from these "Instructions for use" in particular for the correctness, completeness or up-to-dateness of the information contained, for claims for damages or for compensation for any unnecessary expenditures only in cases of gross negligence and intent. SAF-HOLLAND accepts no liability, however, for minor cases of negligence, insofar as no major obligations, damage from impairment of life, physical well-being or health of any persons or guarantees or rights under the Product Liability Act are affected. The same shall apply to minor cases of negligence on the part of persons employed by SAF-HOLLAND. SAF-HOLLAND shall be liable for minor cases of negligence where major obligations are infringed, but limited to the typical damage foreseeable at the time of the handover of these "Instructions for use".
- **4.** The SAF-HOLLAND brand names mentioned in these "Instructions for use" are not necessarily marked as such in all cases. Nevertheless, SAF-HOLLAND points out that they are subject to the rules of the trade mark laws, in particular the provisions of the German Trade Marks Act (MarkenG).
- 5. The texts and illustrations contained in these "Instructions for use" are covered by SAF-HOLLAND copyrights, in particular the rights of use and exploitation, and may only be duplicated or distributed with the prior written authorisation of SAF-HOLLAND.
- 6. Should any disputes with SAF-HOLLAND arise out of or in conjunction with the use of these "Instructions for use", these shall be subject exclusively to the law of the Federal Republic of Germany. Sole venue for all disputes out of or in conjunction with these "Instructions for use" shall be head office of SAF-HOLLAND.
- 7. Should any provision or part of a provision in this Note be or become inapplicable or incomplete, this shall not affect the validity of the other provisions. SAF-HOLLAND and the use of these "Instructions for use" shall then undertake to replace the inapplicable provision by an applicable provision coming closest to the intended economic purpose of this Note. The same shall apply in the event of an incomplete provision.
- 8. If and insofar as this Note contains no provisions, in particular with respect to the enclosed tools proper, the rights and obligations between SAF-HOLLAND and the user of these "Instructions for use" shall be governed by the latest version of the SAF-HOLLAND "General Conditions of Sale and Delivery". The application of the General Terms of Business, in particular the Purchasing Conditions, of the user of these "Instructions for use" shall be ruled out.
- **9.** During all maintenance and repair work, be sure to observe the instructions of the respective brake manufacturer.

Caution

All screws and bolts may only be used once. The specified tightening torque applies for dry tightening. Unless otherwise specified, no additional bolt locking means are necessary. The bolt tightening torques must always be taken from the applicable maintenance and repair manuals. (www.safholland.com)



KNORR BRAKE CALLIPERS

Replace the calliper guide Brake calliper type SB6 and SB7

Repair of the floating bearing (rubber bearing)

Special tools required:

No special tools required here.


Repair of the fixed bearing

Special tools required:

Puller for fixed bearing

Individual parts required: The following tool parts from the tool case are required: No. 2; 15; 16; 25; 26; 29. Assemble the tool as illustrated in the figure.



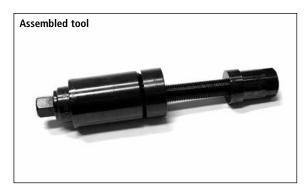

Puller for fixed bearing


Individual parts required: The following tool parts from the tool case are required: No. 11; 15; 16; 22; 26; 29. Assemble the tool as illustrated in the figure.






Puller for bellows

Individual parts required: The following tool parts from the tool case are required: No. 15; 16; 22; 23. Assemble the tool as illustrated in the figure.

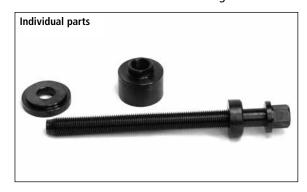

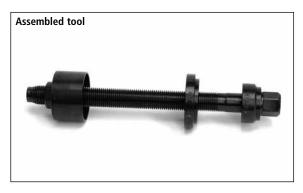


Brake calliper type SB6...(SN) and SB7...(SN)


Repair of the floating bearing (rubber bush)

Special tools required for the rubber bush:

Puller

Individual parts required: The following tool parts from the tool case are required: No. 2; 15; 16; 29. Assemble the tool as illustrated in the figure.

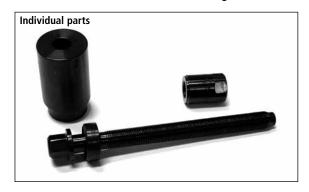


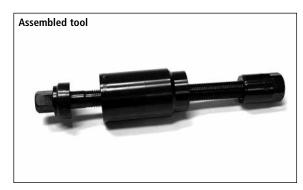

Puller

Individual parts required: The following tool parts from the tool case are required: No. 1; 15; 16; 27; 29. Assemble the tool as illustrated in the figure.



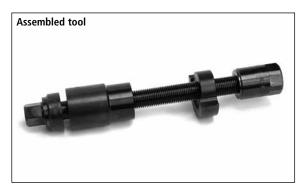


Repair of the fixed bearing

Special tool required for repairing the fixed bearing:

Puller

Individual parts required: The following tool parts from the tool case are required: No. 2; 15; 16; 25; 29. Assemble the tool as illustrated in the figure.



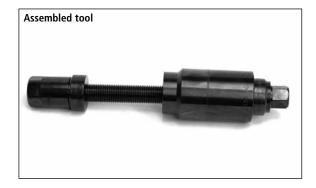

Puller


Individual parts required: The following tool parts from the tool case are required: No. 11; 15; 16; 22; 29. Assemble the tool as illustrated in the figure.






Puller for bellows

Individual parts required: The following tool parts from the tool case are required: No. 15; 16; 22; 23. Assemble the tool as illustrated in the figure.

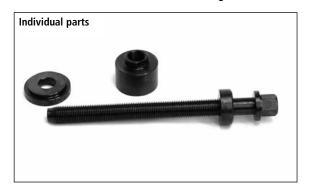

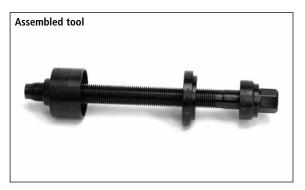

Floating bearing


Individual parts required: The following tool parts from the tool case are required: No. 7; 12. Assemble the tool as illustrated in the figure.





Fixed bearing

Individual parts required: The following tool parts from the tool case are required: No. 5; 6; 21. Assemble the tool as illustrated in the figure.

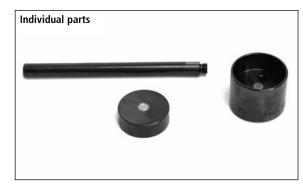




Brake calliper type SB7...(SK) and SB7...(SN) (SAF Part No. XX.XXX.XXXX.21)


Repair of the floating bearing

Special tools required:

Puller for floating bearing


Individual parts required: The following tool parts from the tool case are required: No. 2; 15; 16; 25; 29. Assemble the tool as illustrated in the figure.

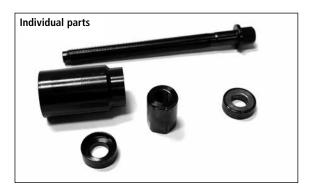


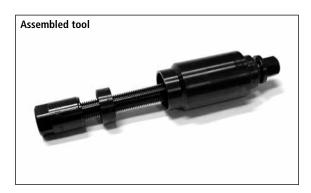

Puller for floating bearing


Individual parts required: The following tool parts from the tool case are required: No. 15; 16; 23; 25; 29. Assemble the tool as illustrated in the figure.

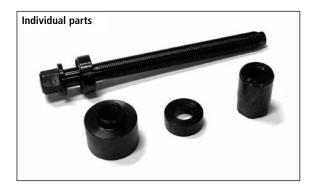


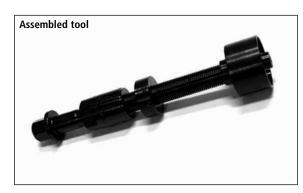

Puller for bellows

Individual parts required: The following tool parts from the tool case are required: No. 15; 16; 22; 23. Assemble the tool as illustrated in the figure.

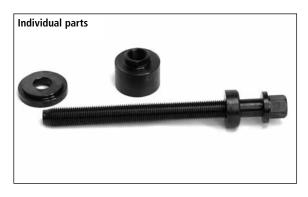

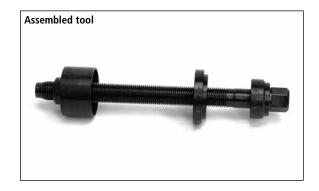


Repair of the fixed bearing

Special tools required:

Puller for fixed bearing

Individual parts required: The following tool parts from the tool case are required: No. 2; 15; 16; 25; 29. Assemble the tool as illustrated in the figure.



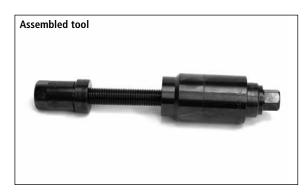

Puller for fixed bearing


Individual parts required: The following tool parts from the tool case are required: No. 11; 15; 16; 22; 29. Assemble the tool as illustrated in the figure.






Puller for bellows

Individual parts required: The following tool parts from the tool case are required: No. 15; 16; 22; 23. Assemble the tool as illustrated in the figure.

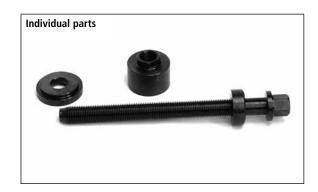

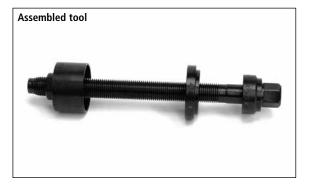




Instructions for use - KNORR


Tools for driving on cap

Individual parts required: The following tool parts from the tool case are required: No. 5; 6; 21. Assemble the tool as illustrated in the figure.

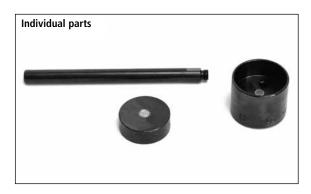


Fixed bearing cap

Assemble all three tools as illustrated.

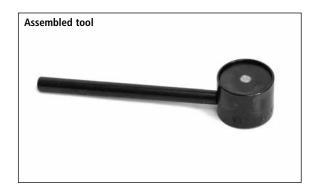

Floating bearing cap

Assemble the tool without No. 5.

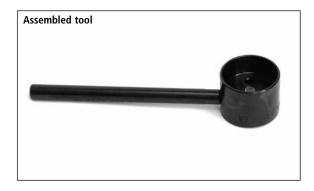


Replace the thrusters with bellows Brake calliper type SB6 and SB7


Replace the thruster bellows incl. inner seal

Special tools required:

Tool for inner seal


Individual parts required: The following tool parts from the tool case are required: No. 17; 28. Assemble the tool as illustrated in the figure.

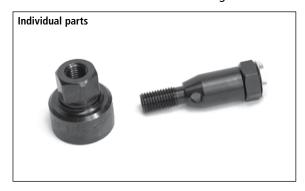


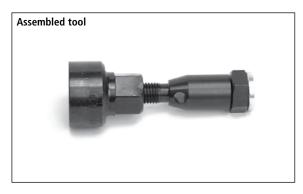

Tool for thruster with bellows


Individual parts required: The following tool parts from the tool case are required: No. 3; 17; 21. Assemble the tool as illustrated in the figure.

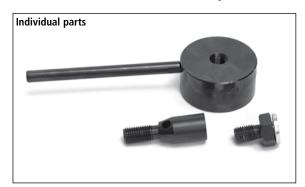

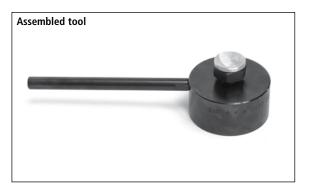

Replace the thrusters with bellows Brake calliper type SL7 and SM7

Individual parts required: The following tool parts from the tool case are required: No. 3; 17; 37. Assemble the tool as illustrated in the figure.

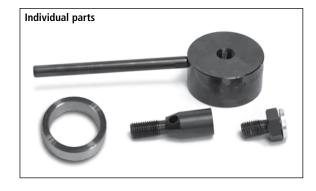





Replace the thruster bellows incl. inner seal

Special tools required:

Tool for inner seal


Individual parts required: The following tool parts from the tool case are required: No. 17; 28. Assemble the tool as illustrated in the figure.

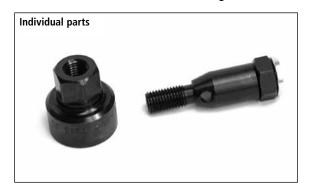


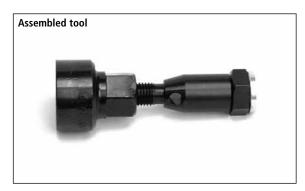

Tool for thruster with bellows

Individual parts required: The following tool parts from the tool case are required: No. 3; 4; 17; 21. Assemble the tool as illustrated in the figure.

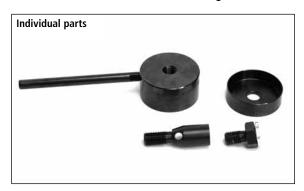

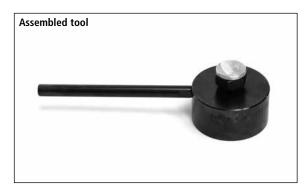



SAF BRAKE CALLIPER Brake calliper type SBS2220H

Mounting of thrust plate bellow

Special tools required:

Thrust plate bellows press

Individual parts required: The following tool parts from the tool case are required: No. 36




Mounting of bellow with bellows press

Special tools required:

Calliper bellows press

Individual parts required: The following tool parts from the tool case are required: No. 33; 34. Assemble the tool as illustrated in the figure.

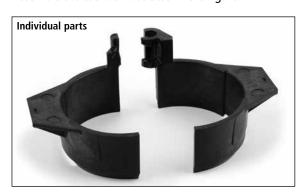



Brake calliper type SBS2220H

Replace the calliper guide

Repair of the floating bearing (plastic bearing)

Special tools required:

No special tools required here.


Repair of the fixed bearing

Special tools required:

Puller for fixed bearing

Individual parts required: The following tool parts from the tool case are required: No. 15; 16; 29; 30; 31; 32. Assemble the tool as illustrated in the figure.




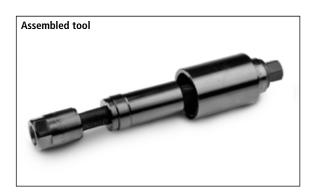

Puller for fixed bearing

Individual parts required: The following tool parts from the tool case are required: No. 15; 16; 29; 30; 31. Assemble the tool as illustrated in the figure.



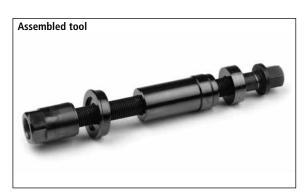



Brake calliper type SBS2220H


Replace the calliper guide

Exchange of reset shaft

Special tools required:

Pulling bracket for resetting

Individual parts required: The following tool parts from the tool case are required: No. 35

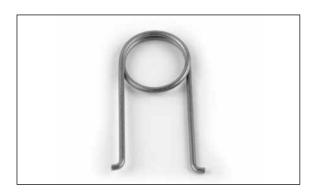

WABCO BRAKE CALLIPER

Brake calliper type PAN 19-1, PAN 19-1 plus and PAN 22-1

Special tools required:

Individual parts required:

The following tool parts from the tool case are required: No. 7; 8; 14; 19; 20.

Assemble the tool as illustrated in the figure.




Driver for the guide bushes

Individual parts required:

The following tool parts from the tool case are required: No. 7: 20.

Assemble the tool as illustrated in the figure.

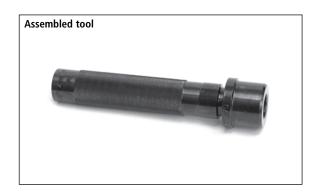

Driver tool for the guide bushes

Individual parts required:

The following tool parts from the tool case are required: No. 7; 8; 14; 19.

Assemble the tool as illustrated in the figure.




Tool for driving out the steel caps

Individual parts required:

The following tool parts from the tool case are required:

No. 21; 24. Assemble the tool as illustrated in the figure.

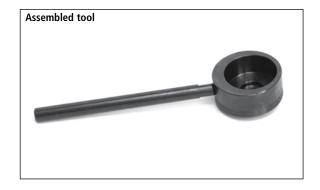

We are always there for you

Emergency +49 6095 301-247

Service +49 6095 301-602

Aftermarket +49 6095 301-301

Operator +49 6095 301-0

Fax +49 6095 301-259

originalparts@safholland.de service@safholland.de www.safholland.com

