




FLEETMASTER and FLEETMASTER LOWLUBE COUPLING INSTRUCTIONS

STEP 1


Check that the lock is OPEN.

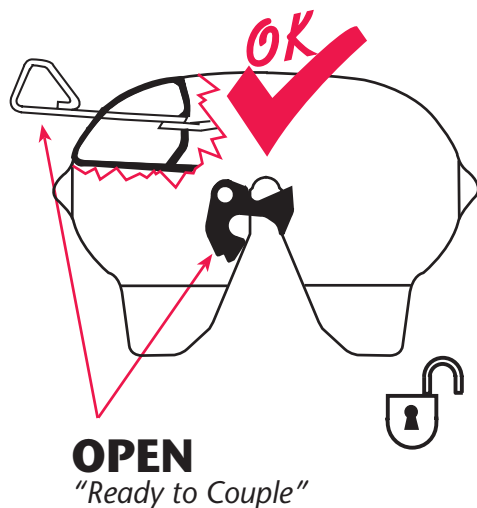

STEP 2

Adjust landing gear.

Fifth wheel must lift the trailer.

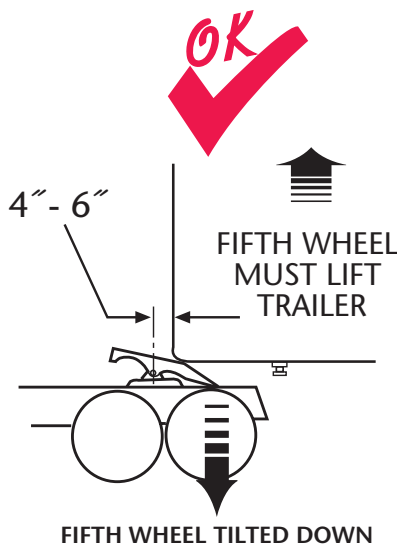


TRAILER IS TOO HIGH!




STEP 3

Center the fifth wheel with the trailer kingpin and slowly back squarely into the trailer.

BACK SQUARELY INTO TRAILER **SLOWLY**

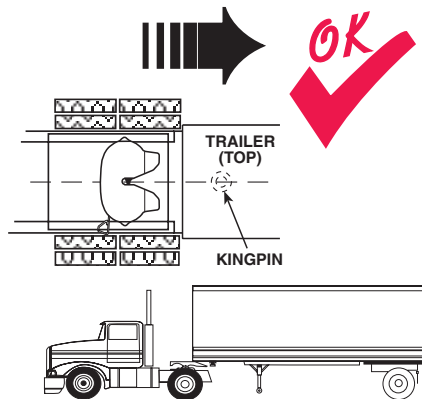

DO NOT BACK INTO TRAILER FAST

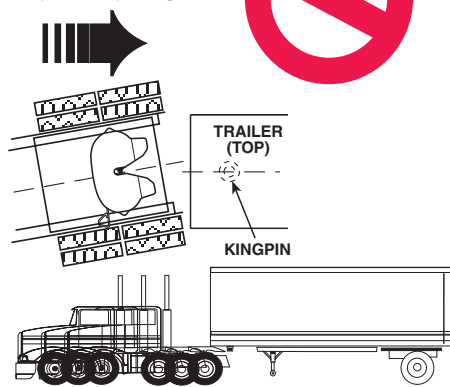



STEP 4


Do a pull test as an INITIAL CHECK.



PULL FORWARD WITH TRACTOR






WITHOUT PULL TEST

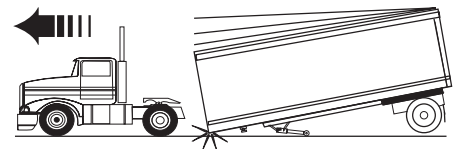

STEP 5

GET OUT OF THE TRACTOR!

VISUALLY check that the lock is CLOSED!

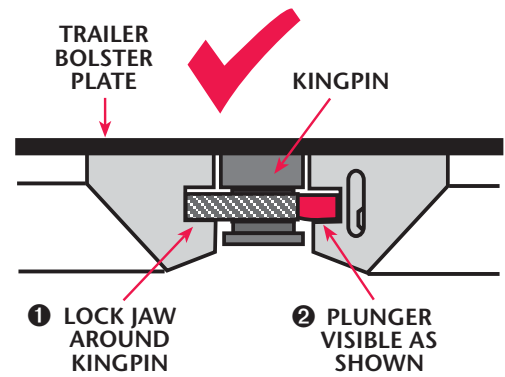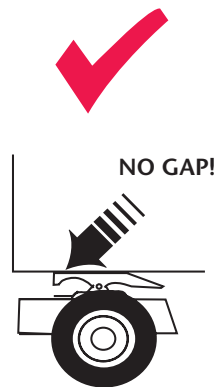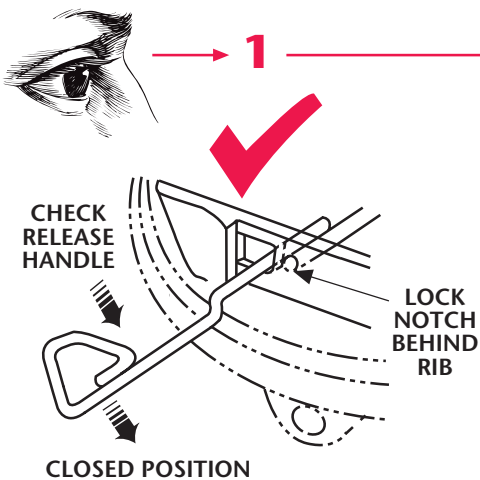

DO NOT RELY ON SOUND

