



GO THE DISTANCE.

COUPLER PRODUCTS


LATCH REPLACEMENT PROCEDURES




RK-62-XA

For PH-T-60-AL


1. Remove and discard the nut, pivot bolt, chain assembly, and latch assembly.

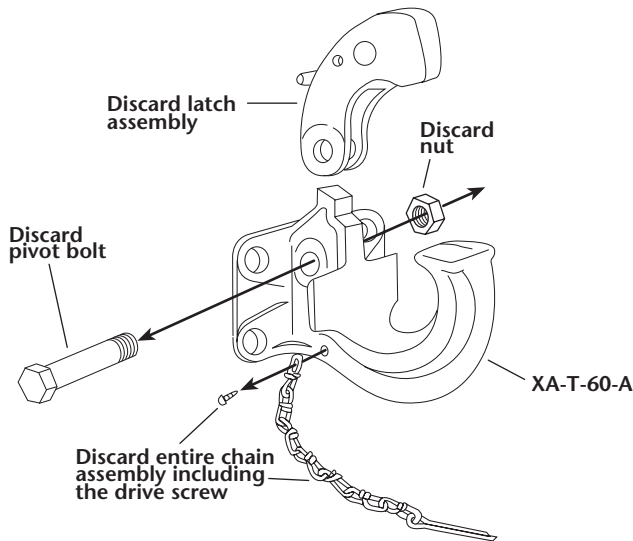


2. Apply Never-Seez® to entire shaft of the new pivot bolt (not on threads).

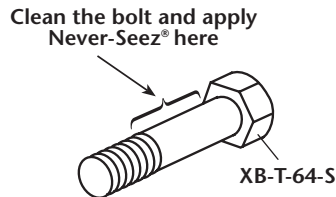

3. Install the new latch assembly using a new pivot bolt, chain assembly, and pivot nut. Torque the nut to 20-50 ft-lbs.

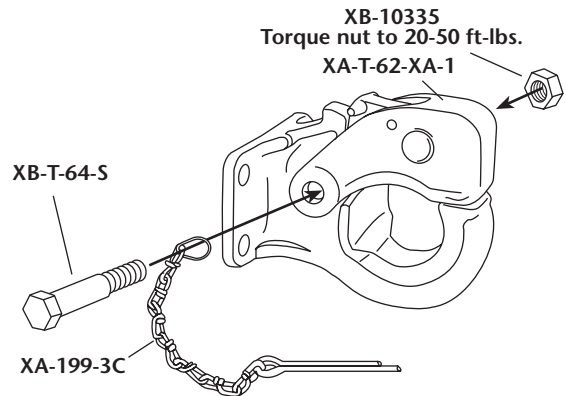

4. Check the latch for proper operation. When closed, the lock must be fully down. Install the cotter pin into the hole in the side of the latch, as shown. Spread the cotter pin to secure it in the latch.

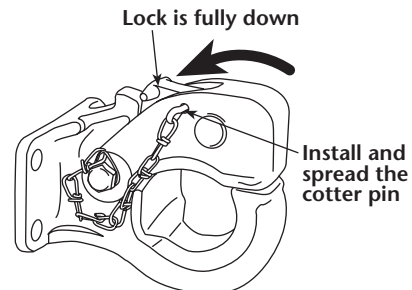

Copyright © April 2002 • The Holland Group, Inc.

Holland USA, Inc. Facilities:

Denmark, SC Muskegon, MI
Dumas, AR Warrenton, MO
Holland, MI Whitehouse Station, NJ
Milpitas, CA Wylie, TX

Ph: 888-396-6501 Fax: 800-356-3929

Holland International, Inc.

Holland, MI
Phone: 616-396-6501
Fax: 616-396-1511

Holland Hitch of Canada, Ltd.

Woodstock, Ontario • Canada
Phone: 519-537-3494
Fax: 800-565-7753

Holland Equipment, Ltd.

Norwich, Ontario • Canada
Phone: 519-863-3414
Fax: 519-863-2398

Holland Hitch Western, Ltd.

Surrey, British Columbia • Canada
Phone: 604-574-7491
Fax: 604-574-0244