Assembly and Operating Instructions HOLLAND[®] Fifth Wheel Rebuild Stand




TF-04229-1 Fifth Wheel Rebuild Stand

Assembly and Operating Procedures


Assembly Instructions

- Assemble the cross straps by installing the center 3/8"-16 x 1" hex head cap screw and the 3/8"-16 locknut. Tighten, but allow free movement.
- Attach the cross straps to the left or right stand leg by installing two (2) 3/8"-16 x 1" hex head cap screws and 3/8"-16 locknuts.
- 3. Attach the cross straps to the other stand leg by following the instructions in step 2 above.
- 4. Attach the cross shafts by installing the 3/4"-10 x 1-3/4" hex head cap screws.
- 5. Tighten the fasteners securely.
- 6. Attach the locking pin and chain assemblies to the stand legs by installing the self tapping screws through the chain and into each stand leg.
- 7. Install the 3/8"-16 x 2" hex head cap screws into the handles.

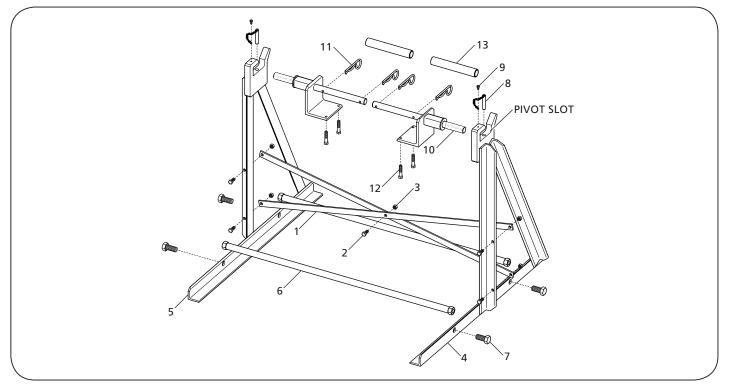

ITEM	DESCRIPTION	PART NO.	QTY.
1	Cross Strap	XA-04869	2
2	HHCS, 3/8"-16 x 1"	XB-C-38-C-1	5
3	Locknut, 3/8"-16	XB-338	5
4	Right Stand Leg	XA-04858	1
5	Left Stand Leg	XA-04859	1
6	Cross Shaft	XA-04871	2
7	HHCS, 3/4"-10 x 1-3/4"	XB-04693	4

ITEM	DESCRIPTION	PART NO.	QTY.
8	Locking Pin and Chain	XA-04829	2
9	Self-Tapping Screw	XB-MSR-316-C-500	2
10	Handle	XA-04860	2
11	Clinch Pin	XB-04897	4
12	HHCS, 3/8"-16 x 2"	XB-C-375-C-200	4
13	Handle Sleeve	XA-04957	2

 

SA Holland)

Figure 1



Operating Instructions

- 1. Make certain that the stand is assembled properly. Refer to Assembly Instructions.
- 2. Remove both locking pins from the mounting holes in the stand pivot slots (*Figure 1*).
- 3. Remove clinch pins from the handles.
- 4. Slide the handles through the fifth wheel pivot ears with the leg of the angle facing the top plate surface (*Figure 2*).
- **NOTE:** When rebuilding the XA-71 series top plate, it will be necessary to install the handle sleeves onto the handle assemblies before inserting into the top plate pivot ears.
- 5. Secure the handles using the clinch pins.
- Tighten the 3/8"-16 x 2" hex head cap screws finger tight, removing the free play between the handles and top plate (*Figure 2, inset*).

- 7. Using a device capable of lifting 500 lbs. (227 kg), mount the top plate in the stand using the handles to guide it into position.
- **NOTE:** Follow instructions published by lifting device manufacturer for proper operation of lifting device.



N If the top plate is to be moved manually, exercise all precautions involved in lifting and moving heavy objects.

- 8. Align the top plate either face up or face down on the stand and slide the handles under the pivot slots in the stand.
- 9. Secure both sides by inserting the locking pins into the hole provided in each pivot slot.
- 10. Begin the rebuild process as outlined in the literature provided in the associated rebuild kit.
- 11. The fifth wheel function and adjustment after rebuilding can be checked on the stand by using a HOLLAND[®] Lock Tester (NOT included).
- 12. Remove the top plate from the stand by reversing steps 3 through 7 above.

