 


Installation Instructions for RK-06559 Air Release Kit

RK-06559 Kit Parts:

Qty.	Part Number	Description
1	XA-06354	Control module
1	XA-06565-35	1/4" O.D. nylon tubing
5	XB-01961	Nylon cable tie
1	XB-04247	Male pipe fitting (for stationary fifth wheel installation)
1	RK-06535	Air line kit (for sliding fifth wheel installation) containing:
		1 - XB-06570 - Male 90 degree swivel elbow
		1 - XB-01959 - 1/4" NPT female buklhead fitting
		1 - XB-06583 - Coiled hose assembly
		1 - XB-01996 - 90 degree street elbow
		1 - XB-01961 - Nylon tie



INSTALLATION PROCEDURES FOR STATIONARY FIFTH WHEELS:

- 1. Attach 1/8" NPT straight male connector fitting (XB-04247) to the air cylinder of the fifth wheel top plate.
- 2. Route 1/4" diameter tubing (XA-06565-35) from the control location in the cab to the male connector fitting.
- 3. Tubing connections are made by inserting the tube into the fitting using a push-to-lock motion.

NOTE: Other connections to the control module are required. For installation instructions, refer to publication FW-TE-58 "Installation and Operating Instructions for Holland Air Release Fifth Wheels XA-3501-06531 and XA-351-07813."

4. Secure the nylon tubing using the nylon cable ties (XB-01961).

INSTALLATION PROCEDURES FOR SLIDING FIFTH WHEELS:

- 1. Attach bulkhead fitting (XB-01959) through the open hole in the slide plate assembly (see figure 1).
- 2. Attach 90-degree street elbow fitting (XB-01996) into top of bulkhead fitting.
- 3. Thread 1/4" NPT end of coiled tubing (XB-06583) into street elbow.
- 4. Thread 1/8" NPT end of coiled tubing into air cylinder of the fifth wheel top plate.
- 5. Attach 90-degree swivel elbow (XB-06570) into the bottom of the bulkhead fitting (XB-01959).
- 6. Route 1/4" diameter tubing (XA-06565-35) from the control module location in the cab to the swivel connector (XB-06570). Secure with nylon cable ties (XB-01961).
- 7. Cut the tubing to length, making certain that the cut ends are clean and square. The tubing is connected to the swivel elbow (XB-06570) at the bulkhead using a push-to-lock motion.
- 8. A similar connection is made in the cab at the control module. This connection is made at the port labeled "Delivery." NOTE: Other connections to the control module are required. For installation instructions, refer to publication FW-TE-58 "Installation and Operating Instructions for Holland Air Release Fifth Wheels XA-3501-06531 and XA-351-07813."

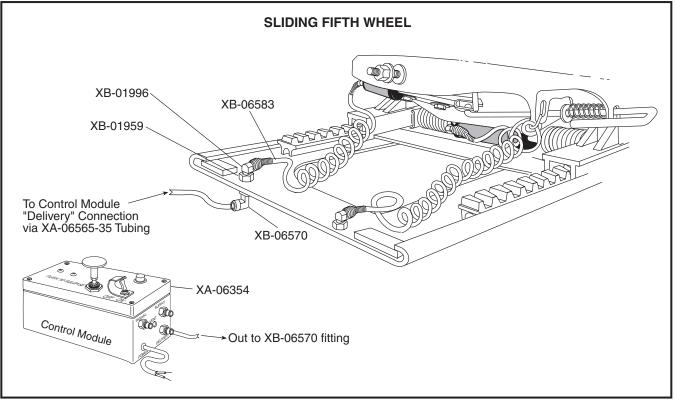


FIGURE 1

Copyright © September 2002 • The Holland Group, Inc.

Fax:

Holland USA, Inc. Facilitie

Denmark, SC Dumas, AR Holland, MI Muskegon, MI Facilities: Warrenton, MO Whitehouse Station, NJ Wylie, TX Holland International, Inc. Holland, MI Phone: 616-396-6501 Fax: 616-396-1511 Holland Hitch of Canada, Ltd. Woodstock, Ontario • Canada Phone: 519-537-3494

800-565-7753

Holland Equipment, Ltd. Norwich, Ontario • Canada Phone: 519-863-3414 Fax: 519-863-2398 Holland Hitch Western, Ltd.

Surrey, British Columbia • Canada Phone: 604-574-7491 Fax: 604-574-0244

Ph: 888-396-6501 Fax: 800-356-3929