



Installation Instructions for RK-09429 and RK-09429-5 FleetMaster Generation I or II (Left-Hand) Release Handle Kit



WARNING


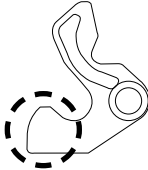
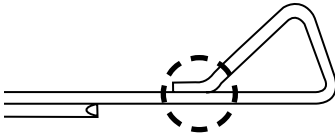

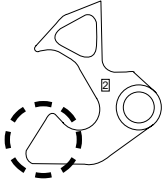
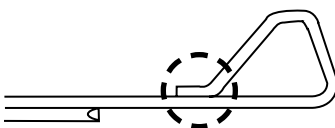

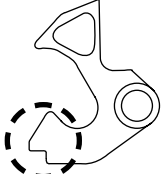
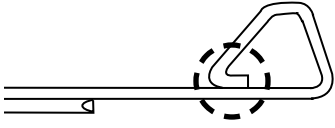
To complete the replacement procedures, the tractor must be uncoupled from the trailer and parked, with the engine turned off, in an area clear of other persons, vehicles, or obstacles.



WARNING

This release handle replacement kit is intended **ONLY** for **LEFT-HAND** release Generation I and II (Gen. I and Gen. II) FleetMaster fifth wheels produced before September 1999.

Verify that your FleetMaster fifth wheel is a Gen. I or Gen. II by identifying the proper fifth wheel lock **AND** handle shown below. If your fifth wheel has a Gen. III lock or handle, **DO NOT USE THIS KIT!** Contact Holland for the proper kit part number.

RK-09429 and RK-09429-5 COMPATIBILITY	LOCKS	HANDLES
 OK GEN. I		
 OK GEN. II		
 GEN. III		

GENERAL INFORMATION:

1. All fifth wheel maintenance, adjustment and rebuilding must be performed by a qualified person using proper tools and safe practices.
2. Do not modify or add to the product.
3. Always wear safety goggles and never strike any part with a steel hammer.
4. Do not weld on this product.
5. Observe standard safety precautions at all times.
6. Use only genuine Holland parts.
7. Do not deviate from these instructions. Refer to Holland publication XL-FW340 for Holland TF-TLN-5001 Lock Tester instructions.

REMOVAL AND REPLACEMENT PROCEDURES:

1. Remove the old cotter pin, washer, release handle, and spring and discard. Slide the new release handle through the left (driver) side release handle window (see Figure 1).


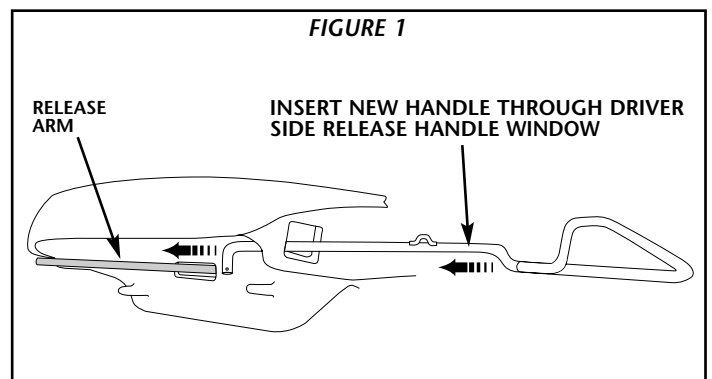


FIGURE 2

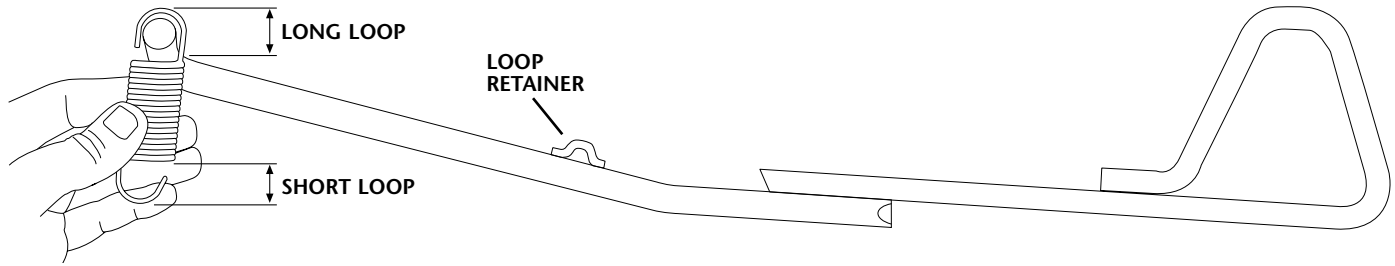

2. Install the new spring on the new handle. To do this, start by inserting the long loop end of the spring on the handle, as shown in Figure 2.
3. Slide the spring along the handle towards the loop retainer (see Figure 3). Rotate the spring on the handle so that the spring loop opening is aligned with the loop retainer (see Figure 4). Align the end of the spring loop with the loop retainer opening (see Figure 5). Rotate the spring to engage the spring end in the loop retainer (see Figure 6).
4. Hook the short loop down through the casting lug (see Figure 7)
5. Now, slide the bent end of the release handle down through the hole in the end of the release arm (see Figure 8).
6. Place a new washer over the end of the release handle and secure with the new cotter pin (Figure 8).
7. **IMPORTANT!** When completing the replacement procedures, check the operation of the fifth wheel by locking and unlocking the fifth wheel at least three times, using a Holland Lock Tester (part number TF-TLN-5001). Refer to Holland publication XL-FW354, "FleetMaster Fifth Wheel Maintenance Procedures," for other important routine maintenance and inspection requirements.

FIGURE 3

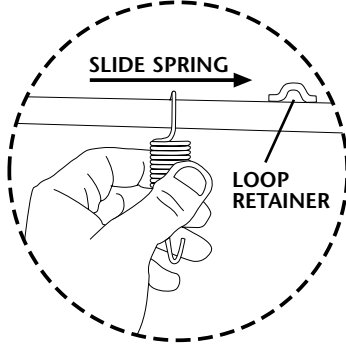


FIGURE 4

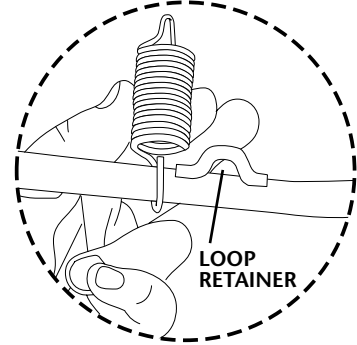


FIGURE 5

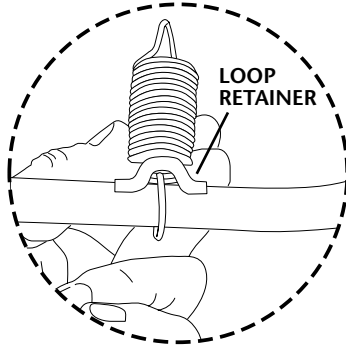


FIGURE 6

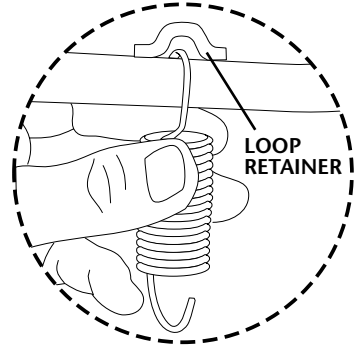


FIGURE 7


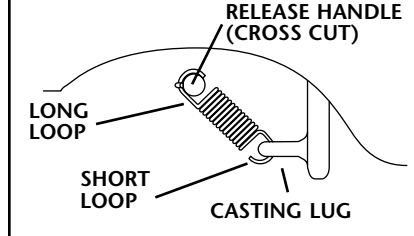


FIGURE 8

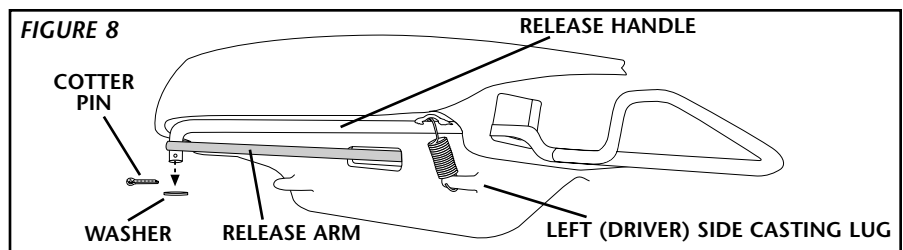

Copyright © August 1999 Holland Hitch Company

★ Holland Hitch Co.
Holland, MI 49423
(616) 396-6501
(888) 396-6501
FAX (800) 769-3299

★ Holland Hitch of New Jersey
Whitehouse Station, NJ 08889
(908) 534-4162
(888) 396-6501
FAX (800) 769-3299

★ Holland Atlantic Hitch Co.
Denmark, SC 29042
(803) 793-3313
(888) 396-6501
FAX (800) 769-3299

★ Holland Hitch of Texas, Inc.
Wylie, TX 75098
(972) 442-3556
(888) 396-6501
FAX (800) 769-3299

★ Holland Pacific Hitch Co.
Milpitas, CA 95035
(408) 262-2550
(888) 396-6501
FAX (800) 769-3299

▲ Holland Binkley Co.
Warrenton, MO 63383
(314) 456-3455
FAX (314) 456-6790

▲ Holland Binkley Co.
Axle Products Division
Delphos, OH 45833
(419) 692-6015
FAX (419) 692-5815

★ Holland Hitch of Canada, Ltd.
Woodstock, Ontario N4S 7Z5
(519) 537-3494
FAX (800) 565-7753

▲ Holland Equipment, Ltd.
Norwich, Ontario N0J 1P0
(519) 863-3414
FAX (519) 863-2398

★ Holland Hitch Western, Ltd.
Surrey, BC V3S 5K1
(604) 574-7491
FAX (604) 574-0244

✦ Eurohitch, GmbH.
Schloss Holte
Germany
(05207) 89560
FAX (05207) 895656

✦ Eurohitch (U.K.), Ltd.
Tipton, West Midlands
United Kingdom
(021) 520-6116
FAX (021) 520-6070

Holland Transtrade
Far East Sdn. Bhd.
Kuala Lumpur, Malaysia
(03) 734-2888
FAX (03) 736-5588

Nippon Holland, Ltd.
Tokyo, Japan
(03) 3461-9130
FAX (03) 3463-1407

✦ Holland Hitch (Aust.), Ltd.
Melton, Victoria, Australia
(03) 9743-6799
FAX (03) 9747-9617