



PH-75

PH-75 SPECIFICATIONS



Weight: 12 lbs.



Rigid type pintle hook.

2,800 lbs. Maximum Vertical Load

14,000 lbs. Maximum Gross Trailer Weight

SAE J847 Information:

Type I - not applicable. Type II - 10,000 lbs.



WARNING

Maintain adequate vertical (tongue) load to properly control the trailer (generally 10%) but do not exceed the above rated capacities.

TOWING APPLICATIONS:

Trailers and equipment designed for over-the-road towing within the stated capacities. For off-road applications, reduce the capacities above by 25% and use in conjunction with a swivel type drawbar.

DRAWBAR EYE DIMENSIONS:

2" to 3" I.D. with 1.25" to 1.63" diameter section.

MOUNTING:

1. Use a mounting structure of sufficient strength to support the rated capacity of the pintle hook in accordance with SAE J849 and SAE J847 respectively.
2. Use the hole pattern described on the reverse.
3. Use (4) .5" grade 8 fasteners, properly tightened.

OPERATING INSTRUCTIONS:

1. Before operating, inspect for proper operation, worn, damaged or missing parts and secure mounting. Correct as required before use.
2. Open latch (XA-76-A) by removing cotter pin (A) and lifting lock (B).
3. Position drawbar eye over the horn of the pintle and lower into place.



WARNING

DO NOT damage the latch. Be particularly careful with the drawbar when coupling and uncoupling.

4. Close the latch and insert the cotter pin. Spread the cotter pin to retain position.



WARNING

Other steps and inspections are also required. Consult OSHA and D.O.T. regulations and American Trucking Association for complete coupling and uncoupling procedures. These cover items such as cargo securement, brakes, lights, safety chains, and other important requirements.

MAINTENANCE:

For proper performance, the following maintenance steps should be performed every 30,000 miles or 3 months, whichever comes first.

1. Clean and check for proper operation. Inspect for worn, damaged or missing parts. Replace as required using only Holland parts.
2. Inspect, in particular, the coupling contact area and periodically disassemble to inspect for wear on the shank mounting flanges. Replace any component when wear exceeds 1/8" (0.125") from the original surface profile.
3. Regularly lubricate latch pivot with a light oil lubricant.
4. Check mounting fasteners for proper torque.

GENERAL INFORMATION:

1. Do not modify or add to the product.
2. Wear safety goggles during installation, removal and servicing.
3. Never strike any part of the item with a steel hammer.
4. Do not weld on this product without written consent from the factory.




WARNING


This product must not be used or maintained in a careless manner.

This product is covered by Holland's Commercial Products Warranty. Holland reserves the right, without giving prior notice, to change specifications and dimensions as designs are altered or improved.

PH-75

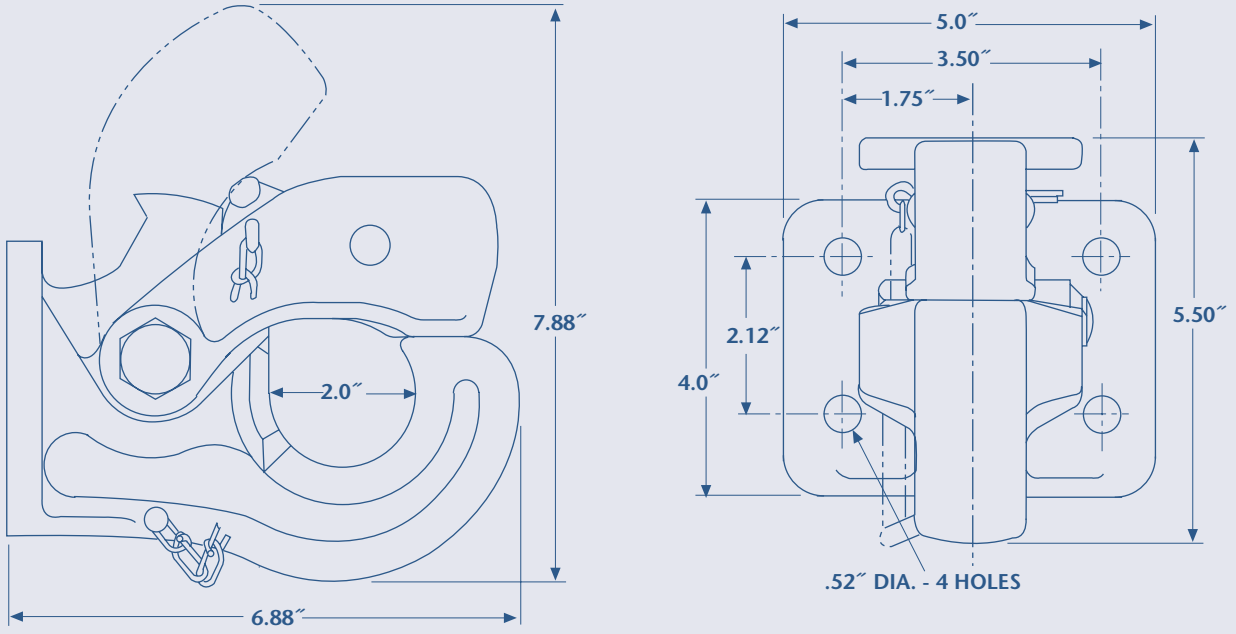

ALL DIMENSIONS SHOWN ARE NOMINAL

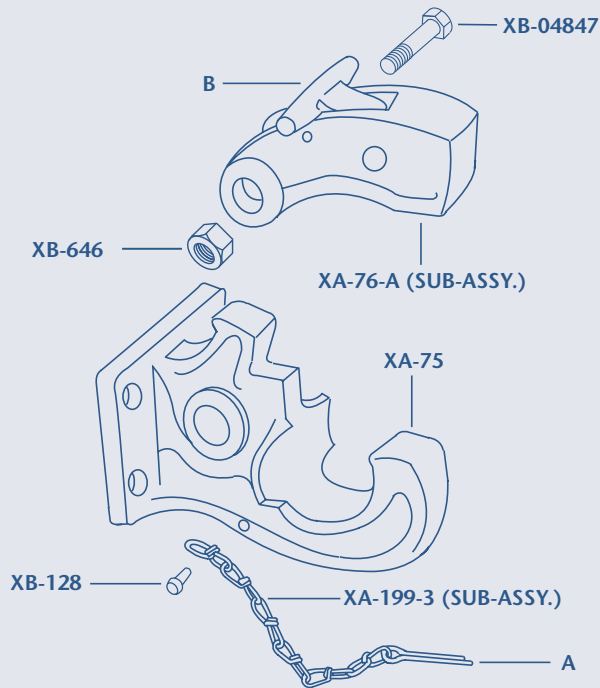

Copyright © July 2000 • The Holland Group, Inc.

Holland Hitch Company Divisions:

Holland, MI
 Whitehouse Station, NJ
 Denmark, SC
 Wylie, TX
 Milpitas, CA
 Phone: 888-396-6501
 Fax: 800-769-3299

Holland Binkley Co.

Warrenton, MO
 Phone: 636-456-3455
 Fax: 636-456-6792

Holland Binkley Co. Axle Products Division

Delphos, OH
 Phone: 419-692-6015
 Fax: 419-692-0503

Holland Neway International, Inc.

Muskegon, MI
 Phone: 231-773-3271
 Fax: 231-766-3893

Holland International, Inc.

Holland, MI
 Phone: 616-396-6501
 Fax: 616-396-1511

Holland Hitch of Canada, Ltd.

Woodstock, Ontario • Canada
 Phone: 519-537-3494
 Fax: 800-565-7753

Holland Hitch Western, Ltd.

Surrey, British Columbia • Canada
 Phone: 604-574-7491
 Fax: 604-574-0244

Holland Equipment, Ltd.

Norwich, Ontario • Canada
 Phone: 519-863-3414
 Fax: 519-863-2398