


LATCH REPLACEMENT PROCEDURE



RK-10545


For all PH-210 / PH-310 / PH-410 and PH-775 NoLube Series Pintle Hooks Without a Pin and Lanyard

VERIFY KIT CONTENTS

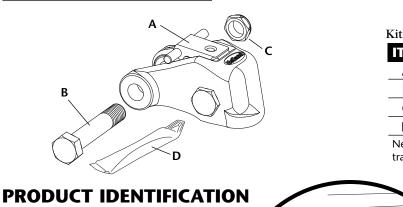


Kit Contains:		
ITEM	PART NO.	QTY
Α	XA-10545-1	1
В	XB-10537	1
С	XB-03104	1
D	Never-Seez [®]	1

Never-Seez[®] is a registered trademark of Bostik, Inc.

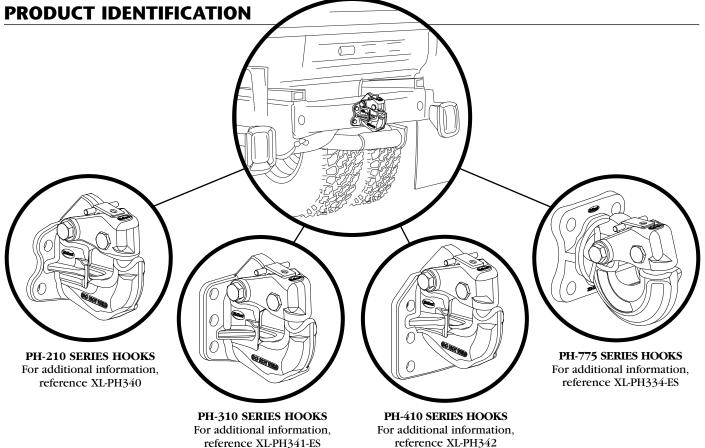


PROCEDURE

Remove and discard the nut, pivot bolt, and latch 1. assembly.

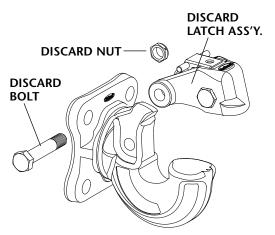

2. Apply Never-Seez[®] to entire shaft of the new pivot bolt (not on threads).






3. Install the new latch assembly using the new pivot bolt and nut.


Torque Specifications:

Torque the lock nut (XB-03104) to 75-100 ft-lbs.

DO NOT reinstall a removed lock nut. Always install a new lock nut when removing or replacing latch assembly. A reinstalled nut may not retain properly and could result in an unintended trailer separation.

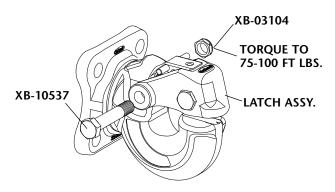

4. Check the latch for proper operation. It should open and close freely. When closed, the lock handle (A) will rotate and move up until it is flush with the top of the latch.

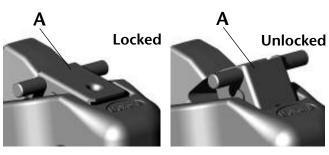

CORRECT

INCORRECT



SAF-HOLLAND USA, Inc. 888.396.6501 Fax 800.356.3929

SAF-HOLLAND Canada, Ltd. 7.3494 Fax 800.565.7753 Western Canada 604.574.7491 Fax 604.574.0244 SAF-HOLLAND International, Inc. 616.396.6501 Fax 616.356.1511

Copyright @ April 2007-SAF-HOLLAND, Inc. All information contained in this document was correct at time of copyright, and is subject to change without notice. All rights reserved.