

Owner's Manual

DB-100SH1 Bolt-On Drawbar

Installation, Operation and Maintenance Procedures

- For on/off-road applications
- Weight: (approx.) 38 lbs. (17.2 kg)



For Load Ratings, Refer to Section 3





Contents	Page	Contents	Page
ntroduction Warranty		Section 4 – Towing Applicati Section 5 – General Informati	
Notes, Cautions, and Warnings		Section 6 – General Safety I	
Section 1 – General Safety Instr	uctions 3	Section 7 – Mounting Instru	ctions
Exploded View and Parts List	4	Section 8 – Operating Instru	ctions
Section 2 – Drawbar Eye Dimens	sions5	Section 9 - Maintenance	8
Section 3 – Load Ratings	6		

Introduction

This manual provides information necessary for the proper operation, maintenance, and inspection of the SAF-HOLLAND® drawbar.

NOTE: For HOLLAND® replacement

components contact SAF-HOLLAND Customer Service at 1-888-396-6501.

Warranty

Refer to the complete warranty for the country in which the product will be used. A copy of the written warranty can be downloaded from our SAF-HOLLAND® website (www.safholland.com).

Notes, Cautions, and Warnings

Read and understand all of the procedures presented in this manual before starting any work on the pintle hook.

NOTE: In the United States, work shop safety requirements are defined by federal and/or state Occupational Safety and Health Act. Equivalent laws could exist in other countries. This manual is written based on the assumption that OSHA or other applicable employee safety regulations are followed by the location where work is performed.

Proper tools MUST be used to perform the mounting and maintenance procedures described in this manual.

This manual contains the terms "NOTE", "IMPORTANT", "CAUTION", and "WARNING" followed by important product information. These terms are defined as follows:

Includes additional information NOTE:

to enable accurate and easy performance of procedures.

IMPORTANT: Includes additional

information that if NOT followed could lead to hindered product performance.

CAUTION

Used without the safety alert symbol, indicates a potentially hazardous situation which. if not avoided, could result in property damage.

ACAUTION Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

AWARNING Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



1. General Safety Instructions

IMPORTANT: Read this manual before

using this product.
Keep this manual in a safe location for future reference.

to componer

▲WARNING


Failure to follow the instructions and safety precautions in this manual can result in equipment failure which, if not avoided, could result in death or serious injury.

Read and observe all warning and caution hazard alert messages in this publication. The information provided can help prevent death, serious injury and/or damage to components.


NOTE: In this manual, all descriptions

of orientation are relative to

Orientation

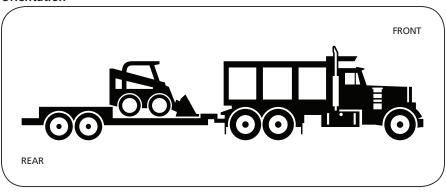



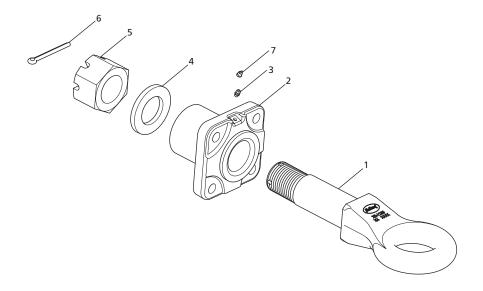



ITEM	DESCRIPTION	PART NUMBER	QTY.
1	Drawbar, 3" I.D.	XA-12017	1
2	Housing	XA-12018	1
3	Fitting, Lube	XB-767	1
4	Washer	XA-10538-1	1
5	Heavy Hex Nut, Slotted, 2 1/4"- 4 1/2"	XB-780-1	1
6	Pin, Cotter 5/16"x 3 1/2"	XB-781-1	1
7	Cap, Grease Fitting	XB-06677	1



2. Drawbar Eye Dimensions

3.0" (76.2 mm) I.D. with 1.63" (41.3 mm) cross section.

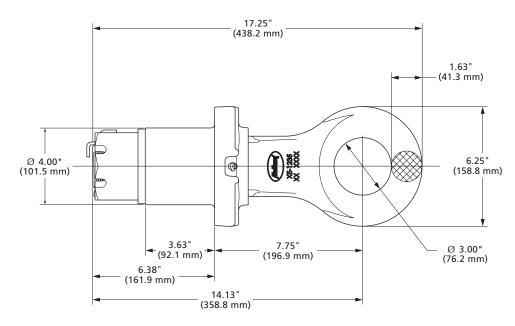

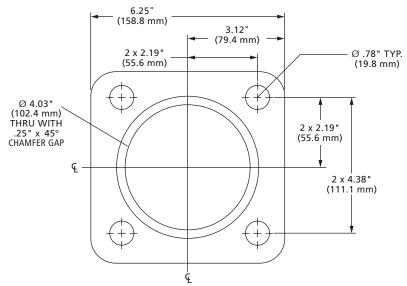



3. Load Ratings

Maximum GTW: 100,000 lb. (45,359 kg) Maximum Vert. Load: 20,000 lb. (9,072 kg)

4. Towing Applications

For general on/off road towing. For severe off-road applications, reduce the above capacities by 25%.

IMPORTANT:

Off-road refers to terrain on which a tow/towed vehicle will operate that is ungraded, rough or undulating, with no maintained travel surface, generally considered to NOT be part of the public road system. Examples include agricultural fields, construction sites, utility right-of-way, temporary logging roads, and what is commonly referred to as 'two-track' roads.

5. General Information

- 1. DO NOT modify or add to the product.
- This product is covered by SAF-HOLLAND's Commercial Warranty. SAF-HOLLAND reserves the right, without giving prior notice, to change specifications and dimensions as designs are altered or improved.
- Inspect the coupling device on the tow vehicle and trailer for proper operation.
 DO NOT use any coupling device that DOES NOT operate properly.
- It is the responsibility of the user to become familiar with coupling and uncoupling procedures that are provided by various governments, industry associations and mating component manufacturers instructions.

6. General Safety Information

This equipment MUST NOT be used in a careless manner.

During Operation:

- Maintain adequate vertical (tongue) load to properly control the towed unit (generally 10% of maximum GTW) but DO NOT exceed the rated capacities.
- DO NOT damage the coupling components. Be particularly careful during coupling and uncoupling.
- 3. NEVER strike any part of the item with a steel hammer.



7. Mounting Instructions

- Use a mounting structure of sufficient strength to support the rated capacity of the pintle hook in accordance with SAE J849 and SAE J847.
- Use the hole pattern described in Section 2.
- Insert and tighten all four (4) new 3/4" diameter Grade 8 bolts, ASTM Grade C lock nuts and hardened 3/4" washers. The recommended minimum torque is 300 ft.-lbs. when using a nut and bolt and 350 ft.-lbs. when using bolts only (Figure 1).

8. Operating Instructions

- 1. Before operating, inspect for wear, damage, missing parts, and secure mounting. Correct as required before use.
- Position the drawbar eye over the 2. horn of the pintle and lower into place (Figure 2 and 3).
- Engage the drawbar with the coupling device per the manufacturer's instructions.

AWARNING Failure to correctly secure the drawbar can result in separation of the pintle hook and drawbar, which, if not avoided, could result in death or serious injury.

Figure 1

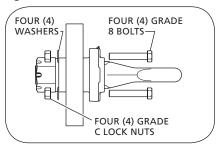


Figure 2


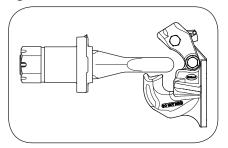


Figure 3



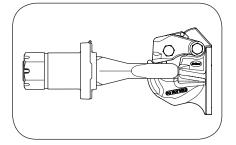

9. Maintenance

For proper performance, the following maintenance steps should be performed every 30.000 miles (48.280 km) or three (3) months, whichever comes first.

AWARNING Failure to inspect and maintain the drawbar could result in separation of the pintle hook and drawbar, which, if not avoided, could result in death or serious injury.

- Clean and check for wear, damaged, or missing parts, and a secure mount. Inspect for worn, damaged or missing parts. Replace as required using only Genuine SAF-HOLLAND parts.
- 2. Inspect, in particular, the coupling contact area of the drawbar. Inspect for any nicks, gouges and deformation, which could interfere with or affect the safe use of the drawbar. If cracks are visible, replace.
- 3. Using calipers or the SAF-HOLLAND drawbar gauges TF-11887, measure the cross section of the drawbar eye. Replace the complete product when wear exceeds 0.125" (3.18 mm) from the original surface profile. For original profile dimension, refer to Section 2.
- Inspect the drawbar fasteners. For bolted 4. connections refer to proper torque in Section 7. In addition to being a safety hazard, a loose drawbar will cause excessive "chucking" and rapid wear. Reinstall or replace any drawbar which is NOT securely mounted.







XL-DB20020UM-en-US Rev A · 2019-06-05 · Amendments and Errors Reserved · © SAF-HOLLAND, Inc., SAF-HOLLAND, HOLLAND, SAF, and logos are trademarks of SAF-HOLLAND S.A., SAF-HOLLAND GmbH, and SAF-HOLLAND, Inc.



From fifth wheel rebuild kits to suspension bushing repair kits, SAF-HOLLAND Original Parts are the same quality components used in the original component assembly.

SAF-HOLLAND Original Parts are tested and designed to provide maximum performance and durability. Will-fits, look-alikes or, worse yet, counterfeit parts will only limit the performance potential and could possibly void SAF-HOLLAND's warranty. Always be sure to spec SAF-HOLLAND Original Parts when servicing your SAF-HOLLAND product.

SAF-HOLLAND USA • 888.396.6501 • Fax 800.356.3929 www.safholland.us

SAF-HOLLAND CANADA • 519.537.3494 • Fax 800.565.7753
WESTERN CANADA • 604.574.7491 • Fax 604.574.0244
www.safholland.ca

SAF-HOLLAND MEXICO • 52.1.55.5456.8641 • Fax 52.55.58162230 www.safholland.com.mx

info@safholland.com

